 


## **AXLE ADAPTERS GUIDE**



2. Check the thread pich of your axis by putting it on sheet, but you can also measure the distance between the threads/coils.



3. Check the maximum length of the axle. Measure only the length of the shaft with thread.



EXTR	AWHEEL ADAPTERS [M	IM] YOUR AXLE LE	NGTH [MM] AND	THREAD PITCH [MM]
12×1	135–142	150–165	1	
12×1	142–148	164–172	1	
12×1.	5 142–148	170–180	1.5	
12×1.	75 142–148	170–180	1.75	
12×1.	75 157+	180-200	1.75	
12×1.	75 190–197	217-229	1.75	